2008 ACCESSORIES & EQUIPMENT

Seat Heaters - Civic (Except GX & Hybrid)

COMPONENT LOCATION INDEX

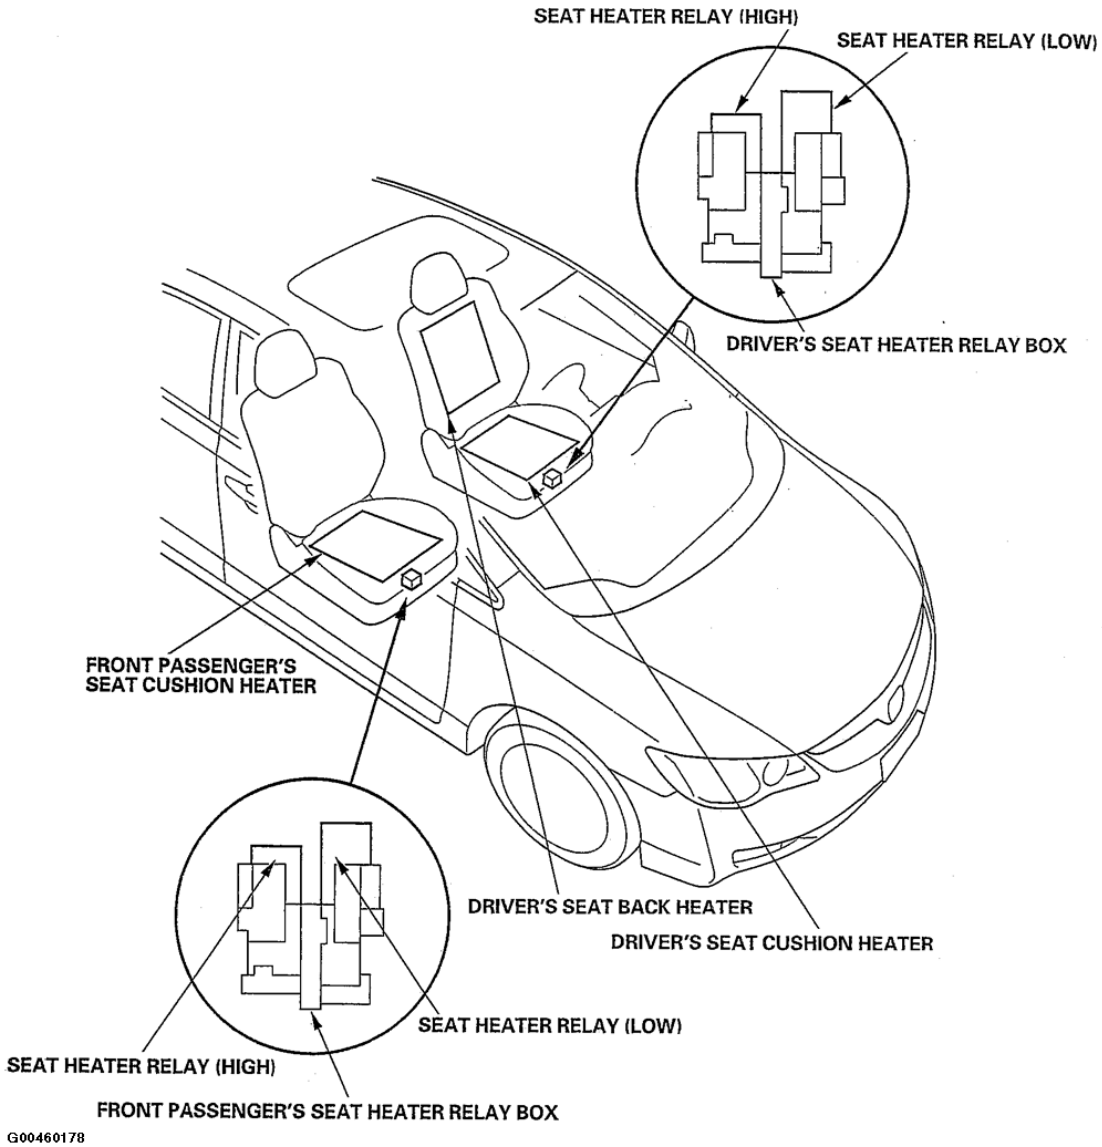
SEAT HEATER RELAY (HIGH)
SEAT HEATER RELAY (LOW)
DRIVER'S SEAT HEATER RELAY BOX
FRONT PASSENGER'S SEAT CUSHION HEATER
DRIVER'S SEAT BACK HEATER
DRIVER'S SEAT CUSHION HEATER
SEAT HEATER RELAY (LOW)
SEAT HEATER RELAY (HIGH)
FRONT PASSENGER'S SEAT HEATER RELAY BOX
G00460178

Fig. 1: Identifying Seat Heater System Component Locations (1 Of 2)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

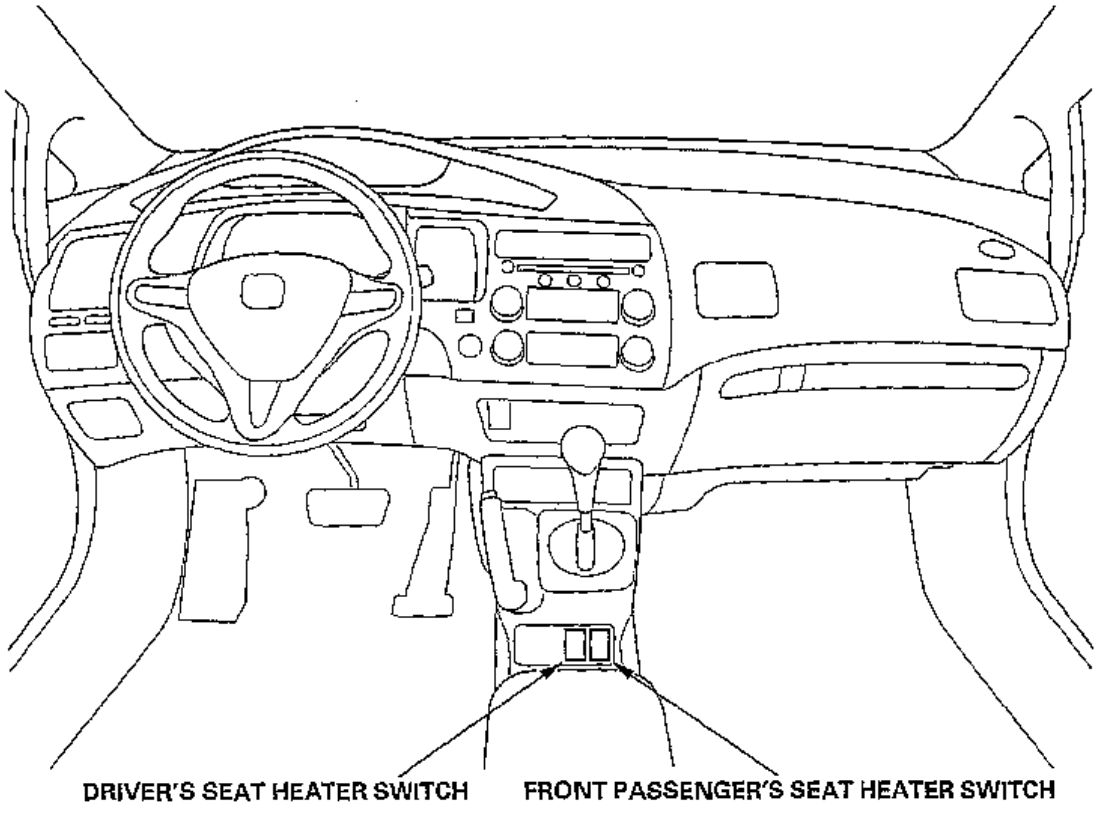

Fig. 2: Identifying Seat Heater System Component Locations (2 Of 2)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

CIRCUIT DIAGRAM

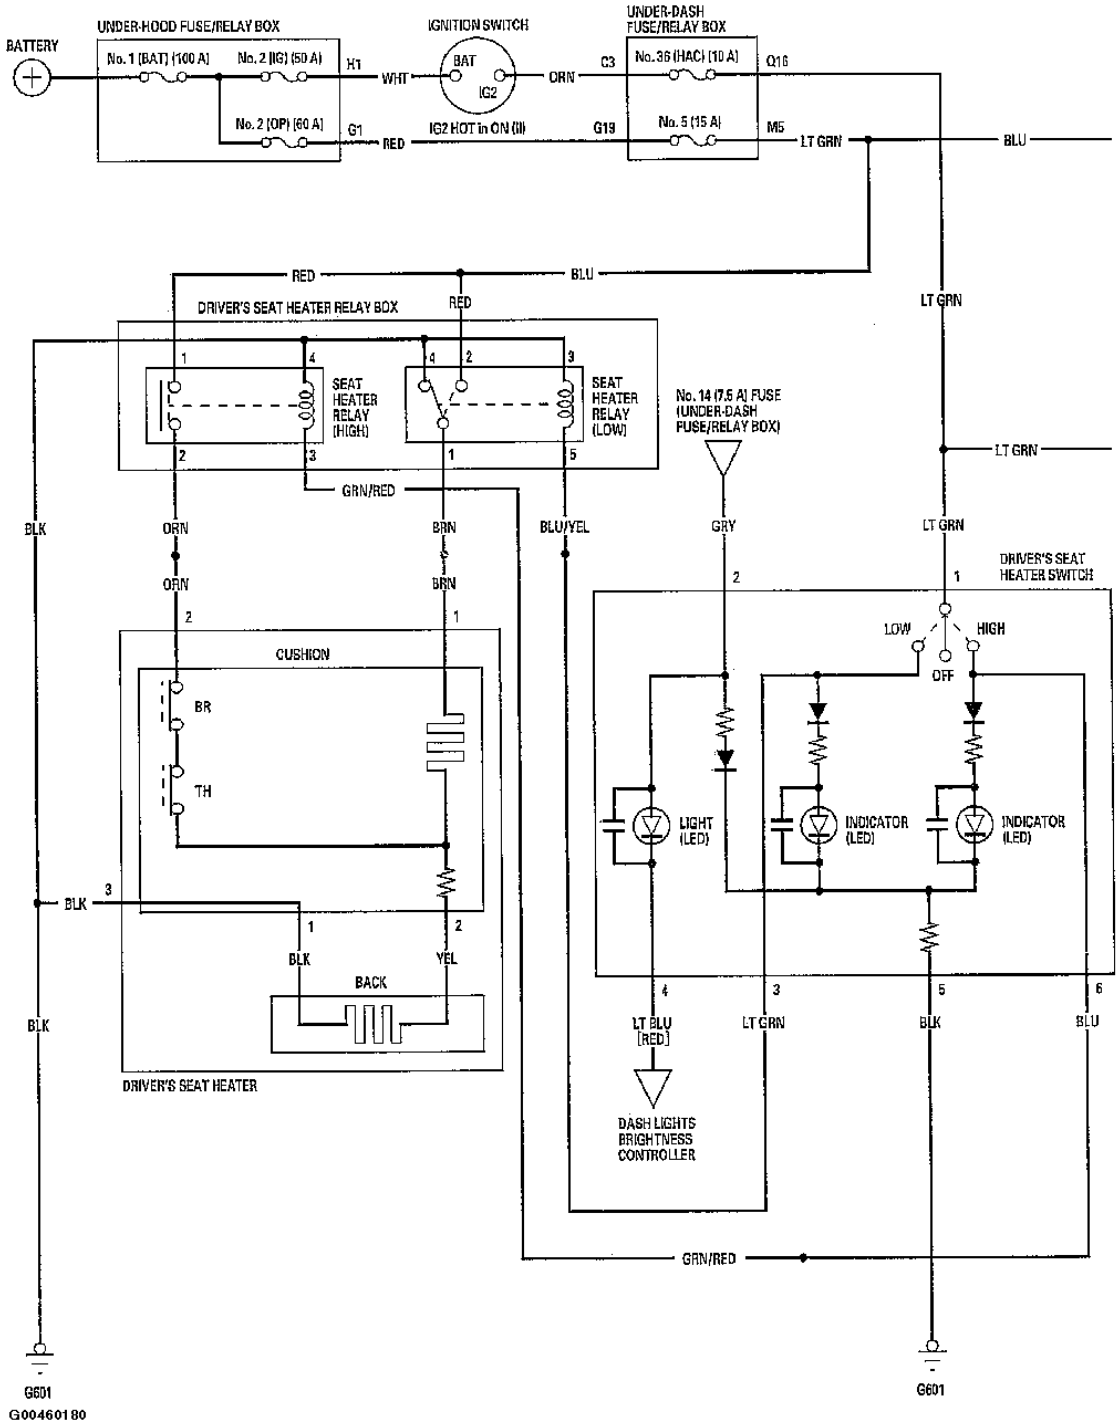

Fig. 3: Seat Heaters Circuit Diagram (1 Of 2)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

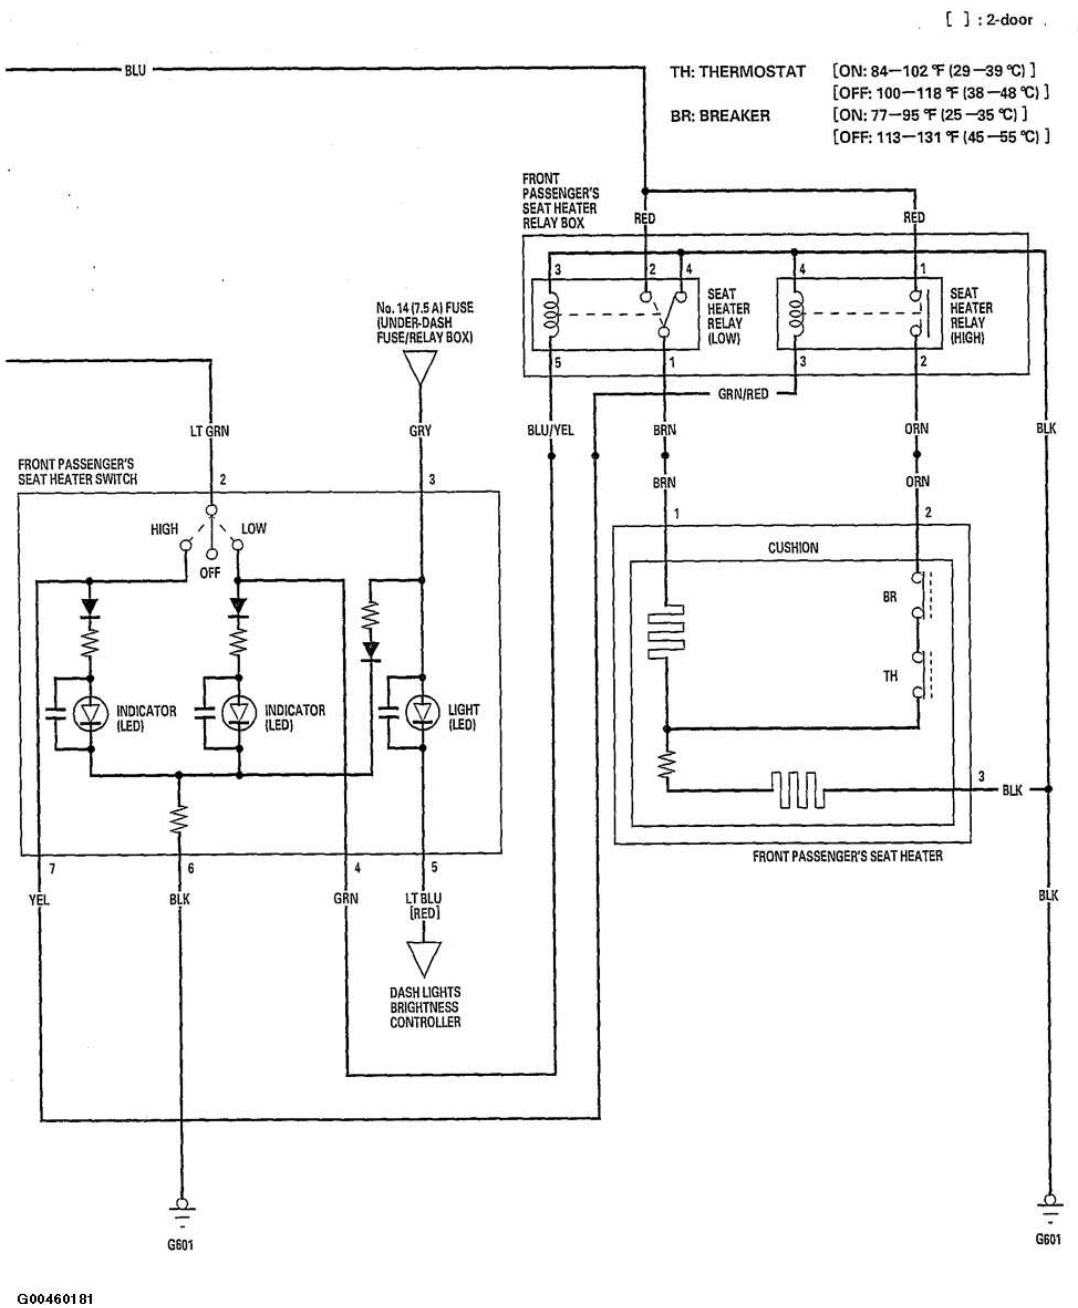

Fig. 4: Seat Heaters Circuit Diagram (2 Of 2)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

SWITCH TEST/REPLACEMENT

1. Remove the center console front panel (see **CENTER CONSOLE REMOVAL/INSTALLATION**).

2. Disconnect the 6P or 7P connector from the seat heater switch (A), then remove the switch.

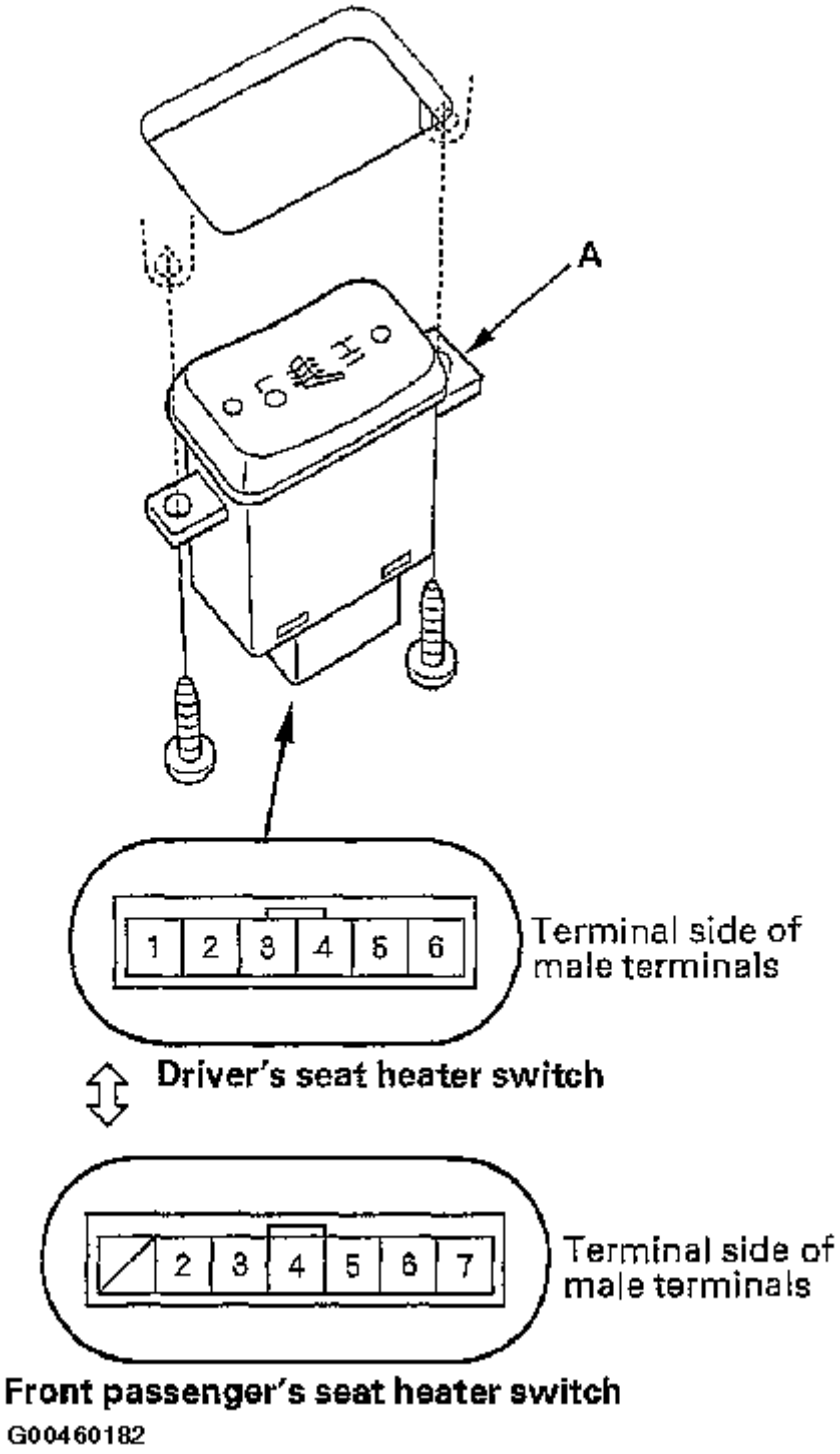
A
1 2 3 4 5 6
Terminal side of male terminals
Driver's seat heater switch
2 3 4 5 6 7
Terminal side of male terminals
Front passenger's seat heater switch
G00460182

Fig. 5: Identifying Seat Heater Switch Connector

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check for continuity between the terminals in each switch position according to the table.

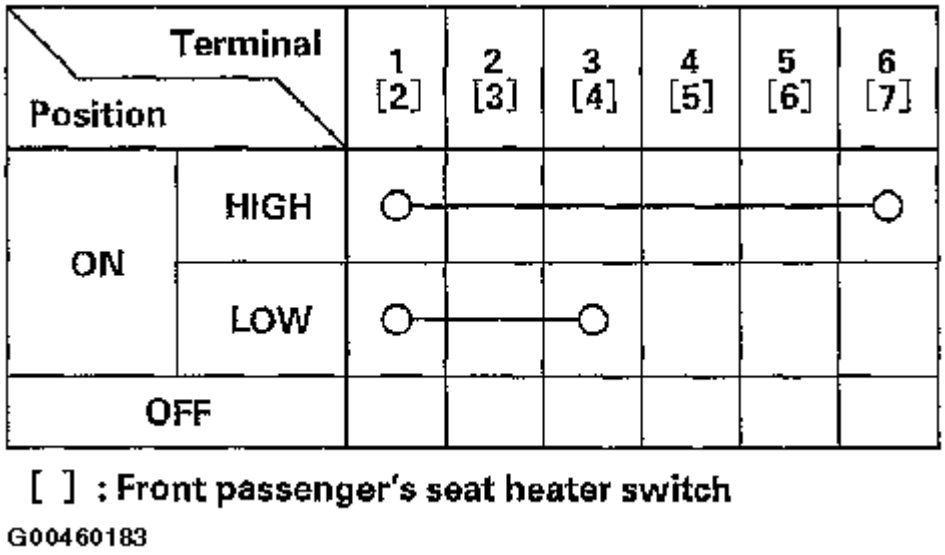

Fig. 6: Seat Heater Switch Continuity Chart
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. If the continuity check is not as specified, replace the switch.

SEAT HEATER TEST

DRIVER'S SEAT

1. Remove the driver's seat (see **FRONT SEAT REMOVAL/INSTALLATION**).
2. Disconnect the 3P connector (A) and 2P connector (B) from the seat heater.

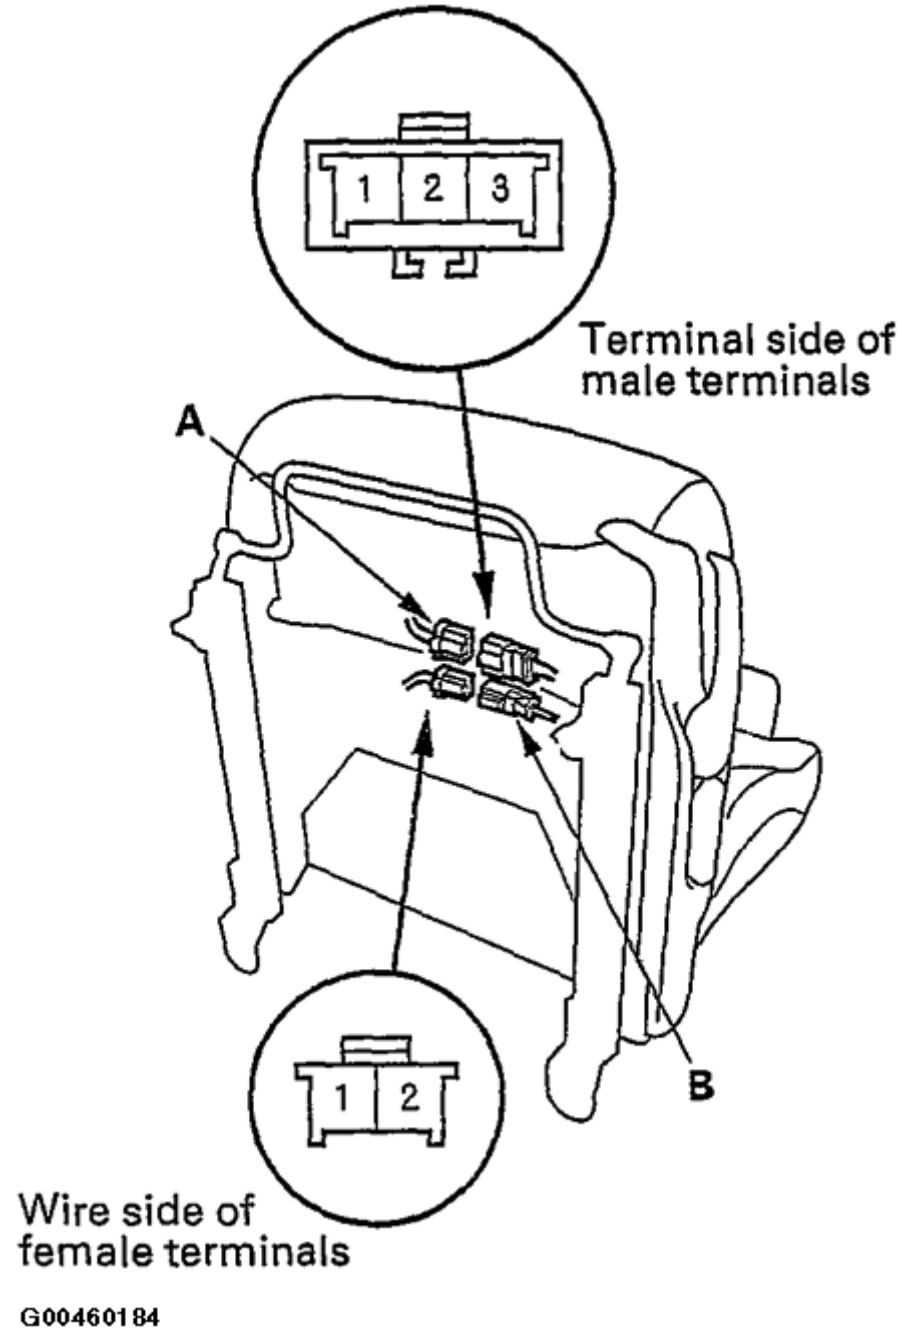

Fig. 7: Identifying Seat Heater Connectors (Driver's Seat)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check for continuity between the No. 1 and No. 2 terminals of the seat-back heater 2P connector. There should be continuity.
4. Reconnect the 2P connector.

5. Check for continuity between the 3P connector (male terminals) No. 1 terminals and the 2P connector (female terminals) No. 2 terminal, and the 3P connector (male terminals) No. 2 and No. 3 terminals. There should be continuity.
6. If the continuity check is not as specified, replace the appropriate seat heater.

FRONT PASSENGER'S SEAT

1. Remove the passenger's seat (see **FRONT SEAT REMOVAL/INSTALLATION**).
2. Disconnect the 3P connector (A) from the seat heater.

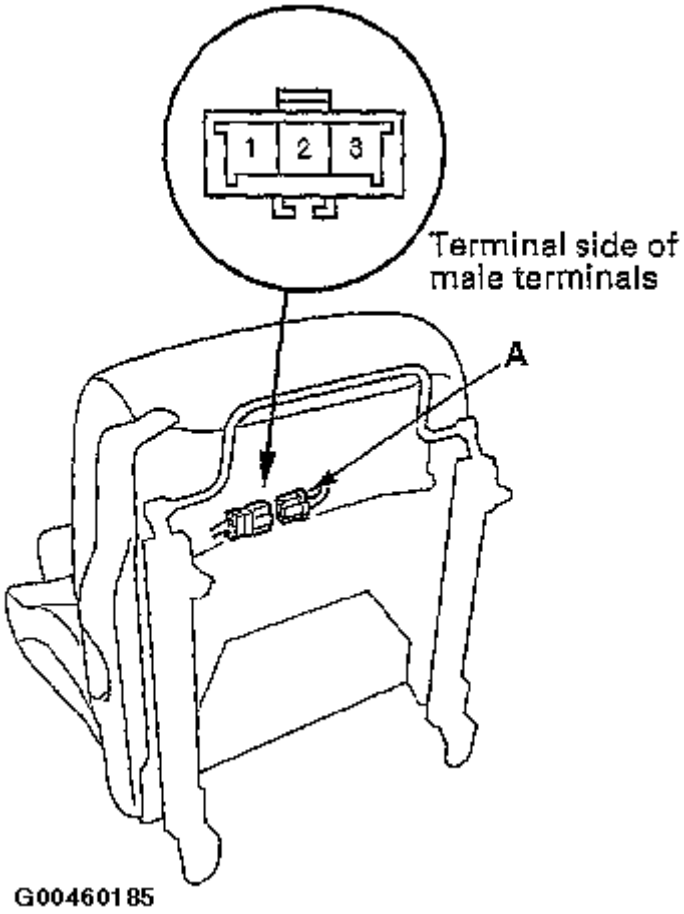

Fig. 8: Identifying Seat Heater Connectors (Passenger's Seat)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check for continuity between the 3P connector (male terminals) No. 1 and No. 2 terminals. There should be continuity.
4. If the continuity is not as specified, replace the seat heater.